

# Panasonic



<KX-DT346>

 

 

 
## Quick Reference Guide Digital Proprietary Telephone

Model No. **KX-DT333/KX-DT343/KX-DT346**

Thank you for purchasing a Digital Proprietary Telephone (DPT). Please read this manual carefully before using this product and save this manual for future use. For more details, please refer to the manuals of the PBX.

**Note:** In this manual, the suffix of each model number is omitted unless necessary.

### Accessories (included)

<input type="checkbox"/> Handset: 1 	<input type="checkbox"/> Handset Cord: 1 	<input type="checkbox"/> Wall Mounting Adaptor <sup>*1</sup> : 1 
<input type="checkbox"/> Screws for wall: 2 	<input type="checkbox"/> Telephone Line Cord: 1 	

\*1 This telephone comes with the wall mounting adaptor already attached. To remove the adaptor, refer to step 1 on page 17.

This unit supports the following optional devices and features:

	KX-DT333	KX-DT343	KX-DT346
<b>Features</b>			
<b>Display</b>	3-Line	3-Line	6-Line
<b>Flexible Buttons</b>	24	24	24
<b>LCD Backlight</b>		✓	✓
<b>Options</b>			
<b>KX-NT303 Add-on 12 Key Module</b>		✓	✓
<b>KX-NT307 (PSLP1528) Bluetooth® Module*1 *2 *3</b>		✓	✓
<b>KX-DT301 USB Module*3</b>		✓	✓
<b>KX-DT390 DSS Console (with 60 keys)*2</b>	✓	✓	✓

✓: Available

 
\*1 The availability of the Bluetooth Module depends on the software version of the connected PBX. Consult your dealer for more details.

\*2 For information on connecting, refer to the each included manual.

\*3 When connecting DPTs via Digital XDP, this optional device cannot be used.

### **Trademark:**

The Bluetooth® word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by Matsushita Electric Industrial Co., Ltd. is under licence.

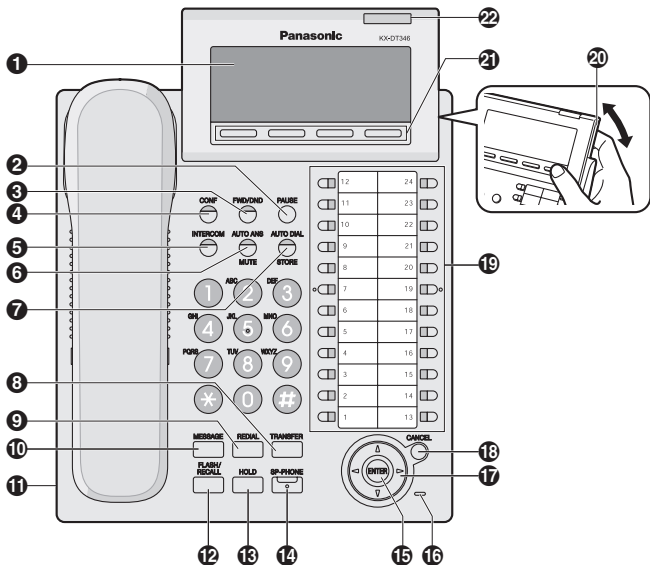

<KX-DT346>











- 1 LCD (Liquid Crystal Display)**
- 2 PAUSE:** Used to insert a pause when storing a telephone number. This button is also used for programming this unit.
- 3 FWD/DND (Call Forwarding/Do Not Disturb):** Used to set Call Forwarding or Do Not Disturb on your extension.
- 4 CONF (Conference):** Used to establish a multiple party conversation.
- 5 INTERCOM:** Used to make or receive intercom calls.
- 6 AUTO ANS (Auto Answer)/MUTE:** Used to receive an incoming call in hands-free mode or mute the microphone/handset during a conversation.
- 7 AUTO DIAL/STORE:** Used for System/Personal Speed Dialling or storing programme changes.

## ***Location of Controls***

---

- 8 TRANSFER:** Used to transfer a call to another party.
- 9 REDIAL:** Used to redial the last dialed number.
- 10 MESSAGE:** Used to leave a message waiting indication or call back the party who left the message waiting indication.
- 11 Headset Jack**
- 12 FLASH/RECALL:** Used to disconnect the current call and make another call without hanging up.
- 13 HOLD:** Used to place a call on hold.
- 14 SP-PHONE (Speakerphone):** Used for performing hands-free operations.
- 15 ENTER:** Used to assign the selected item.
- 16 Microphone:** Used for hands-free conversations.
- 17 Navigator Key:** Used to adjust the volume and the display contrast or select desired items.
- 18 CANCEL:** Used to cancel the selected item.
- 19 Flexible Buttons:** Used to seize an outside line or perform a feature that has been assigned to the key.
- 20 LCD Panel:** Can be adjusted to the desired angle.
- 21 Soft Buttons (S1-S4):** S1-S4 (located from left to right) are used to select the item displayed on the bottom line of the display.
- 22 Message/Ringer Lamp:** When you receive an intercom call, the lamp flashes green, and on an outside call, the lamp flashes red. When someone has left you a message, the lamp stays on red.

# Settings






<b>Speaker volume</b>	<i>While in a hands-free conversation</i>	 Press <b>Up</b> to increase or <b>Down</b> to decrease the volume.
<b>Handset/Headset volume*<sup>1</sup></b>	<i>While using the handset or headset</i>	
<b>Ringer volume</b>	<i>While on-hook or receiving a call</i>	
<b>LCD Contrast</b>	<i>While on-hook</i> PAUSE  → 0 1 →  →  →  → PAUSE 	
<b>Ring Tone</b>	PAUSE  → $\left( \begin{array}{c} \text{CO} \\ \text{OR} \\ \text{INTERCOM} \end{array} \right)$ → $\left( \begin{array}{cc} 0 & 1 \\ 3 & 0 \end{array} \right)$ → $\left( \begin{array}{c} \text{Navigation pad} \\ \text{OR} \\ \text{AUTO DIAL} \\ \text{STORE} \end{array} \right)$ → PAUSE  Press 2 times.	
<b>LCD Backlight*<sup>2</sup></b>	<i>While on-hook</i> PAUSE  → 0 4 → $\left( \begin{array}{c} \text{Navigation pad} \\ \text{OR} \\ \text{AUTO DIAL} \\ \text{STORE} \end{array} \right)$ → $\left( \begin{array}{l} 0 \text{ Automatic} \\ 1 \text{ Always ON} \\ 2 \text{ Always OFF} \end{array} \right)$ → $\left( \begin{array}{c} \text{Navigation pad} \\ \text{OR} \\ \text{AUTO DIAL} \\ \text{STORE} \end{array} \right)$ → PAUSE 	

\*<sup>1</sup> If you hear your own voice through the handset or headset, decrease the volume.

\*<sup>2</sup> For KX-DT343/KX-DT346 only.

# Features List


## Icon Meanings

 (CO) = Flexible button     = Off-hook     = On-hook  
○ = Feature number     = Talk    C.  Tone = Confirmation Tone

## Making Calls

### Calling

#### To an extension

 ►  ► 

#### To an outside party

 ►  (CO) ►  ► 

### Redial


 ► REDIAL  
 ► 

### Quick Dialling

 ►  ► 

### One-touch Dialling

#### To store



PAUSE ○ ►  (CO) ► ② ►  ► AUTO DIAL ○ ► STORE ○ ► PAUSE ○  
\* Enter outside line access number before outside phone number.

#### To dial

 ►  (One-touch Dialling) assigned as a One-touch Dialling button ► 

### Personal Speed Dialling

#### To store

 ► \* 3 0 ►  ►  ► # C.  ► 

\* Enter outside line access number before outside phone number.

#### To dial

 ► AUTO DIAL ○ ► STORE ○ ► \* ►  ► 

## System Speed Dialling

### To dial



## Doorphone Call



## During a Conversation

### Call Hold

#### To hold



 
#### To retrieve a call at the holding extension



#### To retrieve an outside call from another extension



### Call Transfer



## Useful Features

### Multiple Party Conversation

#### To add other parties during a conversation (i.e., conference)



 
#### To leave a conference



# Features List


## Setting the Telephone According to Your Needs

### Do Not Disturb



### Timed Reminder

 To set

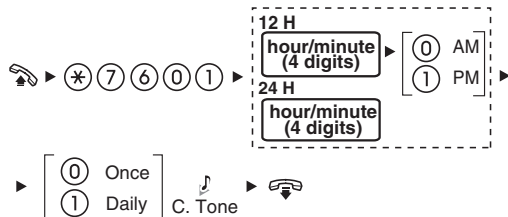

To cancel




To stop or answer the ring back



## Before Leaving Your Desk

 
### Call Forwarding

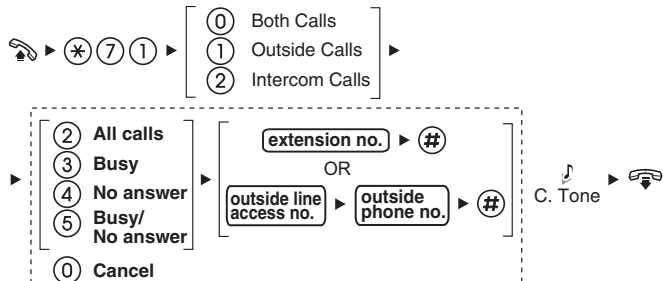

## Making Use of the Voice Mail Service

### Listening to a message


#### From your own extension

-  ▶ **VPS extension no.** ▶  
▶ **Mailbox Password\*** **#**

\* If you have no password, you can skip the last step.

**Note:** VPS = Voice Processing System

#### From someone else's extension

-  ▶ **VPS extension no.** ▶  
▶ **#** **6** ▶ **\*** ▶  
▶ **mailbox no.** ▶  
▶ **Mailbox Password\*** **#**

\* If you have no password, you can skip the last step.

#### KX-TVM series

- ① Listen to Message
- ② Deliver Message
- ③ Mailbox Management
- ▶ ④ Automated Attendant
- ⑤ Message Notification
- ⑥ Other Features
- \* End Call

#### KX-TVP series

- ① Listen to Message
- ② Deliver Message
- ③ Check Mailbox Distribution
- ▶ ④ Automated Attendant
- ⑤ Mailbox Management
- ⑥ Other Features
- \* End Call

### Leaving a message

-  ▶ **VPS extension no.** ▶

#### From your own extension

- Mailbox Password\*** **#**

#### From someone else's extension

- #** **6** ▶ **\*** ▶ **mailbox no.** ▶ **Mailbox Password\*** **#**

\* If you have no password, you can skip the last step.

- ▶ ② ▶ Enter the desired mailbox number ▶ ② ① ▶ Leave a message ▶ ① ② ▶

#### To send the message immediately

- ① ② (KX-TVM series)

- ▶ ② (KX-TVP series)

#### To set the delivery time

- ① ①

▶ Follow the guidance

## Features List

---

### During playback

- ① Repeat Voice Guidance
- \* Exit

- Consult your dealer for more details regarding feature numbers.
- It is possible to assign flexible buttons as feature buttons.
- Control panel/button names and descriptions can be found in "Location of Controls" on page 3.

## Accessing Features Using the Display

---

### Using the LCD Display

It is possible to access the following directories, logs, and menus by pressing left or right on the Navigator Key while this unit is idle:

**Incoming Call Log**

**Outgoing Call Log**

**Personal Speed Dialling Directory**

**System Speed Dialling Directory**

**Extension Number Directory**

**Feature Access**

### Entering Characters

You can enter alphabetic characters and digits using the dialling buttons. Pressing a dialling button repeatedly displays different characters, as shown in the following tables. While entering characters, you can move the cursor with the left and right Navigator keys and delete characters with the TRANSFER button. To toggle between Table 1 and Table 2, press the Soft button (S1) at any time while entering characters. For a list of available characters, refer to the next page.

# Accessing Features Using the Display

## Table 1 (Standard mode)

Times Buttons	1	2	3	4	5	6	7	8	9
①	!	?	"	1					
②	A	B	C	a	b	c	2		
③	D	E	F	d	e	f	3		
④	G	H	I	g	h	i	4		
⑤	J	K	L	j	k	l	5		
⑥	M	N	O	m	n	o	6		
⑦	P	Q	R	S	p	q	r	s	7
⑧	T	U	V	t	u	v	8		
⑨	W	X	Y	Z	w	x	y	z	9
⑩	(space)	.	,	'	:	;	0		
*	/	+	-	=	<	>	*		
#	\$	%	&	@	(	)	€	£	#

 
## Table 2 (Option mode)

Times Buttons	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
①	!	?	"	ä	ö	ü	1								
②	A	B	C	a	b	c	À	Á	Â	Ã	Ä	Å	Æ	Ç	2
③	D	E	F	d	e	f	Ð	È	É	Ê	Ë	3			
④	G	H	I	g	h	i	Ì	Í	Î	Ï	4				
⑤	J	K	L	j	k	l	5								
⑥	M	N	O	m	n	o	Ñ	Ò	Ó	Ô	Õ	Ö	Ø	Œ	6
⑦	P	Q	R	S	p	q	r	s	Š	ß	7				
⑧	T	U	V	t	u	v	Ù	Ú	Û	Ü	8				
⑨	W	X	Y	Z	w	x	y	z	Ý	Ž	9				
⑩	(space)	.	,	'	:	;	0								
*	/	+	-	=	<	>	*								
#	\$	%	&	@	(	)	€	£	#						

## Operation Board Angle Adjustment

---

The angle of the operation board can be set to one of eight angles (level 1 = 0°, level 8 = 45°).

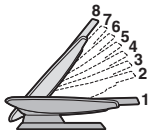

### CAUTION:

Hold the operation board until the operation board is secured at the desired angle. Make sure you do not pinch your fingers when raising or lowering the operation board.

### To raise:

Gently lift the operation board one level at a time.

### To lower:

 
Raise the operation board to level 8. Next, with one hand on the base of the unit, lift the operation board again to release the latch, then slowly push the operation board down to level 1. If the operation board cannot be lowered to level 1, repeat this step.



### Locking the Handset Hook

Pull down the handset hook until it locks to prevent the handset from falling off the handset cradle when the unit is mounted to a wall or set at a high angle. To temporarily place the handset down during a conversation, hook it over the top edge of the unit as shown.



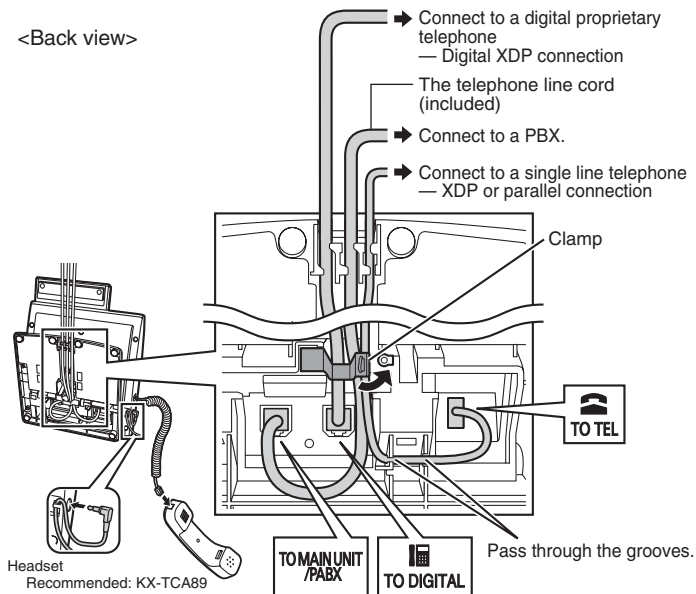

- Consult your dealer for more details about XDP and Digital XDP.

## CAUTION:

### When connecting a headset

- Ensure that the headset cord is wound around the hook to prevent damage to the connector.

### When connecting cords

- Ensure the cords are inserted in the grooves, and are clamped to prevent damage to the connectors.

## Installing KX-DT301/KX-NT303

### CAUTION:

- To prevent damage to the telephone, be sure to unplug the extension line before you set up or remove the KX-DT301 (USB Module) or the KX-NT303 (Add-on 12 Key Module).
- Connect the KX-NT303 first when installing both the KX-DT301 and the KX-NT303.

 
### KX-NT303

The Add-on 12 Key Module allows 12 additional flexible buttons to be added to this unit. These buttons are used to seize an outside line, make a call using One-touch Dialling, or perform a feature that has been assigned to the key.




<with a KX-DT346>


1. Open the cover.

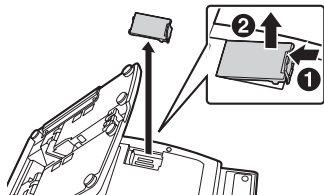


2. Attach the KX-NT303 to your unit with the screws (included with KX-NT303).

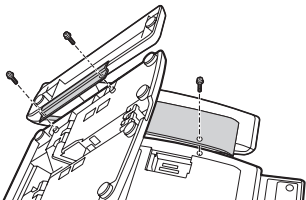 

 3. Plug the flat cable into the connector (1), then bend the cable slightly as shown (2).

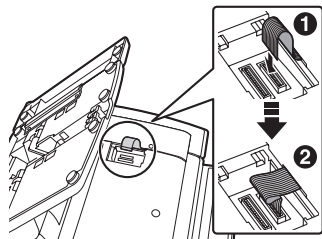

 
4. Close the cover.

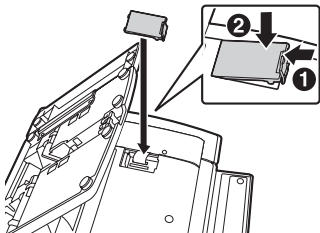


## KX-DT301

The USB Module can be connected between the DPT and the personal computer through USB interface to implement personal CTI (Computer Telephony Integration).

 
1. Open the cover.

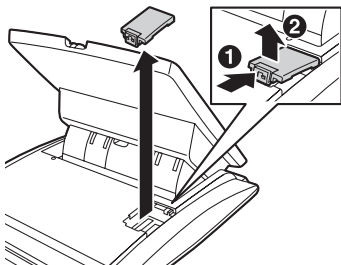

 
2. Plug the flat cable into the connector as shown.

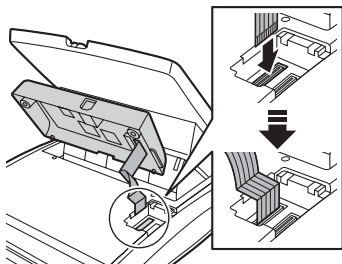

 3. Close the cover.

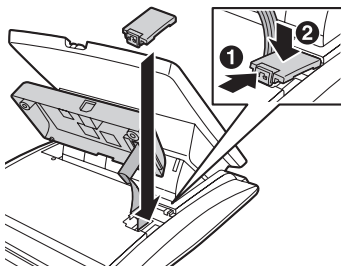

 
4. Connect the USB cable to the USB port.

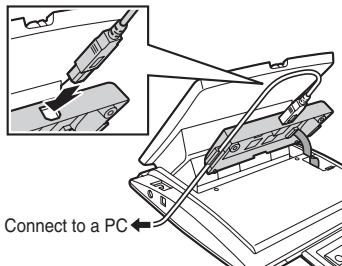


- Ensure that the USB cable goes through the cable guide.
- Please use a USB cable shorter than 3 m.

## Installing KX-DT301/KX-NT303

 5. Insert the protrusions on the KX-DT301 into the 2 holes in the unit.

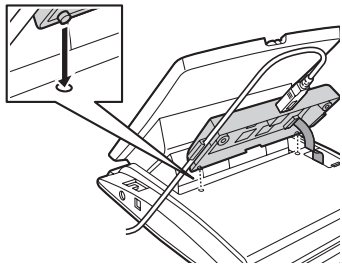

6. Attach the KX-DT301 to your unit with the screws (included with KX-DT301).

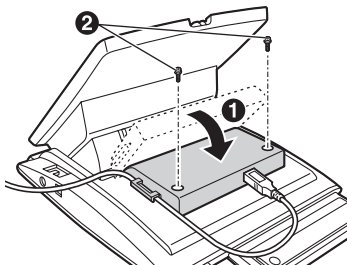 


7. Install the USB driver. Refer to Installation Manual on the CD-ROM included with KX-DT301.

1. Remove the wall mounting adaptor from the unit as shown.


2. Set the operation board to level 1, then connect and secure the telephone line cords.

 - The cords can also be run from the top of the unit (page 13).

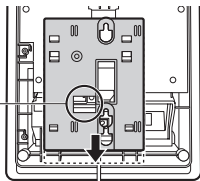


3. Attach the wall mounting adaptor as shown.

 - Make sure the cords are not pinched by the wall mounting adaptor. When running the cords from the top of the unit, look through the opening in the wall mounting adaptor (1) to confirm that the cords are not being pinched.

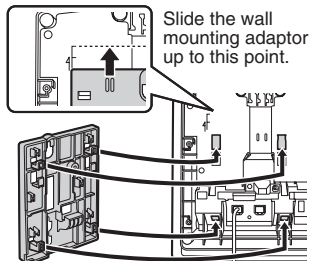

4. Drive the 2 screws (included) into the wall either 83 mm or 100 mm apart, and mount the unit on the wall.

 - You can find a wall mounting template on page 23.
- Make sure that the wall that the unit will be attached to is strong enough to support the unit (approx. 1.65 kg).
- Make sure the cords are securely fastened to the wall.
- When this unit is no longer in use, make sure to detach it from the wall.

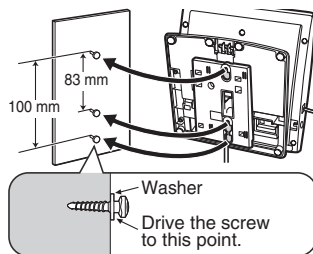

- For information on locking the handset hook, refer to page 12.

## ***Important Information***

---

### **When using KX-DT300 series DPTs, keep the following conditions in mind.**

- If you are having problems making calls, unplug the extension line and connect a known working telephone. If the known working telephone operates properly, have the defective telephone repaired by an authorised Panasonic factory service centre. If the known working telephone does not operate properly, check the PBX and the internal extension wiring.
- Wipe the unit with a soft cloth. Do not clean the unit with abrasive powders or with chemical agents such as benzene or thinner.
- Use only the correct Panasonic handset.
- Do not disassemble this unit. Dangerous electrical shock could result. The unit must only be disassembled and repaired by qualified service technicians.
- If damage to the unit exposes any internal parts, immediately disconnect the cable or cord.
- Never attempt to insert wires, pins, etc. into the vents or other holes of this unit.
- This unit is designed to aid the visually handicapped to locate dial keys and buttons.
- This unit is designed to be installed under controlled conditions of ambient temperature and a relative humidity.
- Avoid installing the unit in damp or humid environments, such as bathrooms or swimming pools.
- 999 and 112 can be dialled on the product after accessing the outside line for the purpose of making outgoing calls to the BT emergency (999) and (112) services (United Kingdom only).

**Take special care to follow the safety suggestions listed below.**

### **Installation**

#### **Environment**

- 1) Do not use this unit near water, for example, near a bathtub, washbowl or sink. Damp basements should also be avoided.
- 2) Keep the unit away from heating appliances and devices that generate electrical noise, such as fluorescent lamps, motors and televisions. These noise sources can interfere with the performance of the unit. It also should not be placed in rooms where the temperature is less than 5 °C or greater than 40 °C.

#### **Placement**

- 1) Do not place heavy objects on top of this unit.
- 2) Care should be taken so that objects do not fall onto, and liquids are not spilled into, the unit. Do not subject this unit to excessive smoke, dust, moisture, mechanical vibration, shock or direct sunlight.
- 3) Place the unit on a flat surface.

#### **WARNING:**

TO PREVENT POSSIBLE FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE.

THIS HANDSET EARPIECE IS MAGNETISED AND MAY RETAIN SMALL FERROUS OBJECTS.

THE USE OF EXCESSIVE SOUND VOLUME THROUGH EARPHONES, HEADPHONES, OR HEADSETS MAY CAUSE HEARING LOSS. DISCONNECT THE TELEPHONE LINE CORD FROM THIS PRODUCT IF THIS PRODUCT EMITS SMOKE, AN ABNORMAL SMELL OR MAKES UNUSUAL NOISE. THESE CONDITIONS CAN CAUSE FIRE OR ELECTRIC SHOCK. CONFIRM THAT SMOKE HAS STOPPED AND CONTACT AN AUTHORISED SERVICE CENTRE.

#### **IMPORTANT NOTICE:**

- Under power failure conditions, the DPT may not operate. Please ensure that a separate telephone, not dependent on local power, is available for use in remote sites in case of emergency.

This unit is capable of being used in conjunction with hearing aids fitted with inductive coil pick-ups. The handset should be held as for normal conversation. For operation, the hearing aid should be set to its "T" position or as directed in the operating instructions for the hearing aid.



## Important Information

---

### Information for Users on Collection and Disposal of Old Equipment and used Batteries



These symbols on the products, packaging, and/or accompanying documents mean that used electrical and electronic products and batteries should not be mixed with general household waste.

For proper treatment, recovery and recycling of old products and used batteries, please take them to applicable collection points, in accordance with your national legislation and the Directives 2002/96/EC and 2006/66/EC.

By disposing of these products and batteries correctly, you will help to save valuable resources and prevent any potential negative effects on human health and the environment which could otherwise arise from inappropriate waste handling.

For more information about collection and recycling of old products and batteries, please contact your local municipality, your waste disposal service or the point of sale where you purchased the items.

Penalties may be applicable for incorrect disposal of this waste, in accordance with national legislation.

#### For business users in the European Union

If you wish to discard electrical and electronic equipment, please contact your dealer or supplier for further information.

#### Information on Disposal in other Countries outside the European Union

These symbols are only valid in the European Union. If you wish to discard these items, please contact your local authorities or dealer and ask for the correct method of disposal.

#### Note for the battery symbol (bottom two symbol examples):

This symbol might be used in combination with a chemical symbol. In this case it complies with the requirement set by the Directive for the chemical involved.



# CE 1731

This product is intended to be connected to a Panasonic PBX only. Panasonic Communications Company (U.K.) Ltd. declares that this equipment is in compliance with the essential requirements and other relevant provisions of Radio & Telecommunications Terminal Equipment (R&TTE) Directive 1999/5/EC.

Declarations of Conformity for the relevant Panasonic products described in this manual are available for download by visiting:

**<http://www.doc.panasonic.de>**

Contact to Authorised Representative:

Panasonic Testing Centre

Panasonic Marketing Europe GmbH

Winsbergring 15, 22525 Hamburg, Germany

 


## WALL MOUNTING TEMPLATE

1. Drive the screws into the wall as indicated.
2. Hook the unit onto the screw heads.

### Note:

Make sure to set the print size to correspond with the size of this page. If the dimensions of the paper output still deviate slightly from the measurements indicated here, use the measurements indicated here.

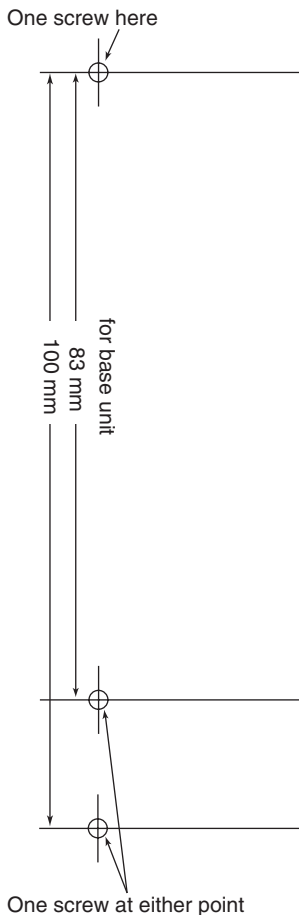

**Panasonic Business Systems U.K.**

Panasonic House, Willoughby Road, Bracknell,  
Berkshire RG12 8FP

**Copyright:**

This material is copyrighted by Panasonic Communications Co., Ltd., and may be reproduced for internal use only. All other reproduction, in whole or in part, is prohibited without the written consent of Panasonic Communications Co., Ltd.

© 2008 Panasonic Communications Co., Ltd. All Rights Reserved.

**PSQX4679ZA-GQ** KK0708YH0 (UK)